


rava™ seat pad, head support cover & cleaning kit

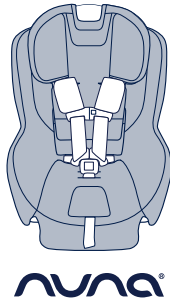

IMPORTANT!
**KEEP THESE INSTRUCTIONS FOR
FUTURE REFERENCE:**
READ CAREFULLY

⚠ WARNING: Carefully read and understand all instructions and warnings in this manual, the manual that comes with child restraint, and those labeled on your child restraint. Failure to do so can result in the **SERIOUS INJURY** or **DEATH** of your child.

⚠ WARNING
DEATH OR SERIOUS INJURY CAN OCCUR

Perform the steps in this document, carefully and completely, and always follow the owners manual for use and installation.

Keep screwdriver and brush away from child. Tools are not intended to be toys.

Keep screwdriver, brush and instructions for future use.



IM-001453D



Nuna Baby Essentials, Inc.
70 Thousand Oaks Blvd. | Morgantown, PA 19543
1.855.NUNA.USA | nunababy.com

Cleaning the Seat Pad and Head Support Cover

When required, seat pad and head support cover may be machine washed with cold water and mild detergent, on the delicate cycle.

Allow to air dry.

DO NOT use bleach or other harsh chemicals to clean your child restraint seat pad and head support cover.

DO NOT attempt to iron your child restraint seat pad or head support cover.

Clean the Harness Adjuster

Harness adjuster can be cleaned at any time with included tool and following the

Step 3: Clean Harness Adjuster steps 1-8.

Contact

For replacement parts, service, or additional warranty questions, please contact our customer service department.




In the USA:

infousa@nunababy.com
www.nunababy.com
1.855.NUNA.USA

Parts List

Make sure all parts are available before assembly. If any part is missing, please contact Nuna (see back cover for information). Tools included.

- | | | | |
|---|--------------------|---|----------------|
| 1 | Seat Pad | 3 | Screw Driver |
| 2 | Head Support Cover | 4 | Cleaning Brush |

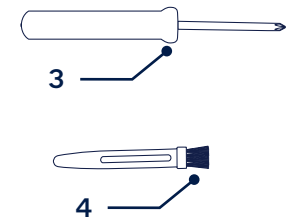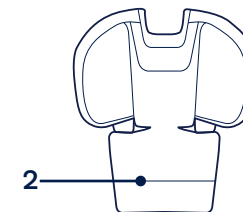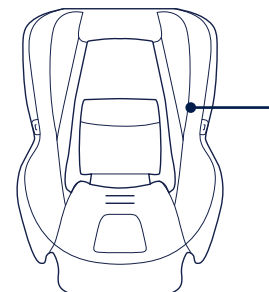

Step 1: Remove Seat Pad and Head Support Cover

- 1 - To Open Chest Clip**
Press button on front of clip and pull clip apart.
- 2 - To Open Harness Buckle**
Press red button on front of buckle and pull out buckle tongues.
- 3 - Unsnap seat cover.
- 4 - Remove cover from child restraint.
 - Start at bottom, near calf support, work toward buckle holder.
 - Pull seat cover out of seat cover retaining channel.
 - From the center of the seating area, push the white plastic tab on the seat cover off of the screw and untuck the corner flap.
 - Unhook cover from around harness button adjuster and underneath calf support.
 - Repeat steps A through C for the other side.
- 5 - Flip cover over the top of the child restraint. Slide seat cover off of the tether.

Take care when removing head support cover so as not to damage the energy absorbing foam.

- 6 - Remove Head Support Cover**
 - Grasp head support cover at top behind head support button.
 - Peel cover off head support; work on one side then the other.


If debris is found in seat while removing seat pad, follow **Step 3: Clean Harness Adjuster** steps 1-8.

⚠ Discard old seat pad and head support cover.

Step 2: Harness Function Test

PUSH on back of seat and firmly **PULL** forward on the harness straps without pressing release button.

If harness stays tight, skip to **Step 4: Attach New Seat Pad and Support Cover**.

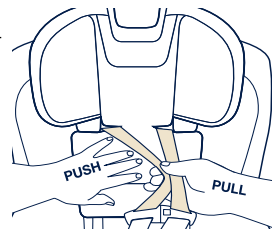

⚠ If harness loosens, follow **Step 3: Clean Harness Adjuster** steps 1-8.

Step 4: Attach New Seat Pad and Head Support Cover

Attach Head Support Cover


- 1 - Wrap head support cover around head support.
- 2 - Insert into retaining channel on rear of head support.
- 3 - Route shoulder straps through head support cover (a) and snap cover to head support (b).

Attach Seat Pad

Recline child restraint to rear facing position 1. See infant restraint instruction manual.

- 4 - Wrap seat pad around head rest.
- 5 - Insert tether through opening in seat pad and tuck the seat cover into the retaining channel along the edge of the seat.
- 6 - Tuck the corner flap in near the screw (a). From the center of the seating area, push the white plastic tab on the seat cover down over the screw (b).
- 7 - While pulling down on the fabric from the outside, fold plastic tab under seat pad and tuck seat pad into the retaining channel at end of the restraint seat.
- 8 - Wrap seat pad around calf support and attach plastic hook to bottom of calf support.
- Repeat steps 7 through 9 for the other side.
- 9 - Snap seat cover.
- 10 - Ensure harness buckle (a) and harness adjustment strap (b) are pulled through seat pad and seat pad is tucked under harness lock cover (c).

When seat pad and head support cover are fully assembled, re-do **Step 2: Harness Function Test**.

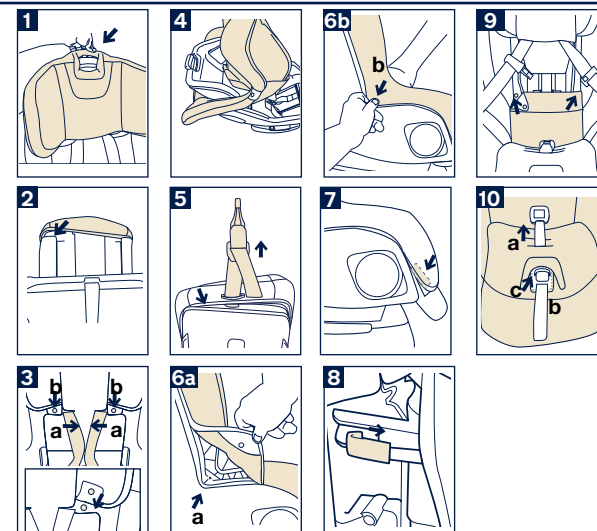

Step 3: Clean Harness Adjuster

If you are unable or unwilling to perform the cleaning of the harness adjuster area contact Nuna at 1-855-686-2891 or info.usa@nunababy.com for additional assistance with the cleaning, including returning the child restraint to Nuna to perform the cleaning if necessary, at no charge to you. Nuna will pay the shipping costs.

To Access Harness Adjuster

- 1 - Loosen harness, press down on harness release button while pulling forward on the harness straps until about 6" of adjustment strap is coming out of the adjuster.
- 2 - Recline child restraint to rear facing position 1. See infant restraint instruction manual.
- 3 - Flip seat over to expose 2 harness adjuster cover screws (a). Using included screw driver, loosen and remove screws (b). **KEEP** screws for reinstall.
- 4 - Flip seat onto base and recline to forward-facing position 1.
- 5 - Pull harness adjuster cover off of seat and slide along webbing. **DO NOT** remove from webbing.

To Clean Harness Adjuster

- 6 - Use provided cleaning brush to brush away debris from harness adjuster mechanism.
- 7 - While pressing harness release button, brush and scrape each tooth/groove down to where the web and tooth/grooves meets. Use brush handle to remove stubborn debris.
- 8 - Pull webbing out slightly to help remove debris out of teeth area. Clean each tooth/groove carefully.

When fully cleaned, release locking mechanism and re-do **Step 2: Harness Function Test**.

Reverse steps 1-5 to re-assemble harness adjuster cover.

To reinstall, after test, slide harness adjuster cover back into place (5) and reinstall screws to secure harness adjuster cover (3) (do not overtighten), work harness back and forth through adjuster and perform Harness function test again to confirm proper installation.

