


FOR DRIVERS

Uber | nuna
rava™ convertible car seat

Scan the code for videos, FAQs, warranty information, and more.

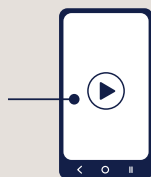

FIRST Decide between rear or forward-facing, based on child size.

MAX. HEIGHT



49 in.
(124 cm)



Rear-Facing

5 lbs → 50 lbs
2.3 kg → 22.6 kg

Birth up to at least 2 years

Infant inserts are ONLY for use with infants between 5 and 11 lbs.



Tether

Forward-Facing

30 lbs → 65 lbs
13.6 kg → 29.4 kg

THEN Follow the steps for RAVA installation from the instruction manual or video (scan code above).

⚠ Each step is important.



LAST Flip card over to have your passenger follow the steps on the back. ▶

Contact us for additional support by email or phone.
ubersupport@nunababy.com
+1 (833) 656-1867

Your call or message will be handled as a high priority on a dedicated channel.

This card is intended as a quick reference guide and does not replace the details in the owner's manual. Please **fully read the manual** and use this card as reference. Check the installation section of the manual for full instructions.

FOR CAREGIVERS

Uber | nuna
rava™ convertible car seat

FIRST Check these 3 things.

✓ TETHER

Tether hook must be:

FORWARD-FACING Attached to vehicle

REAR-FACING Attached to back of RAVA

✓ TIGHTNESS

Hold RAVA near the belt path where the seat belt comes out of the shell. Test for movement side to side, front to back, up and down. The seat should move less than 1 inch.

✓ RECLINE

White number should show in:

Blue for **REAR-FACING**

Red for **FORWARD-FACING**



THEN Secure child properly.

- A REAR-FACING** Adjust the head support to position the harness straps **AT** or just **BELOW** the child's shoulders.
- B FORWARD-FACING** Adjust the head support to position the harness straps **AT** or just **ABOVE** the child's shoulders.
- C** Ensure the buckle is securely fastened and straps are snug and flat on shoulders and thighs. Pull up on the harness to check.
- D** Ensure harness tightness. It is snug if you cannot pinch a fold horizontally in the strap. (1)
Fasten and position chest clip level with child's armpits. (2)

